


Q-SPOT200 DMX Chart

18 Ch	23 Ch	DMX Value	Functions
1	1	000-255	Pan 0-540°
	2	000-255	Pan Fine
2	3	000-255	Tilt 0-540°
	4	000-255	Tilt fine
3	5	000-255	Pan/Tilt speed from fast to slow
4	6	000-255	Dimmer 0-100% (Spot)
5	7	<b>Strobo</b>	
		000-003	Strobe open
		004-099	Fade strobe slow to fast
		100-149	Pluse strobe slow to fast
		150-199	Fade In strobe slow to fast
		200-249	Rand strobe slow to fast
		250-255	Strobe open
6	8	<b>Color</b>	
		000-009	White
		010-019	White + Color 1
		020-029	Color 1
		030-039	Color 1 + Color 2
		040-049	Color 2
		050-059	Color 2 + Color 3
		060-069	Color 3
		070-079	Color 3 + Color 4
		080-089	Color 4
		090-099	Color 4 + Color 5
		100-109	Color 5
		110-119	Color 5 + Color 6
		120-129	Color 6
		130-139	Color 6 + Color 7
		140-149	Color 7
		150-159	Color 7 + Color 8
		160-169	Color 8
		170-179	Color 8 + Color 9
		180-216	Clockwise rotation fast to slow
		217-218	Stop
219-255	Counter-clockwise rotation slow to fast		
7	9	<b>Static Gobo</b>	
		000-009	Open
		010-019	Gobo 1
		020-029	Gobo 2
		030-039	Gobo 3
		040-049	Gobo 4
		050-059	Gobo 5
		060-069	Gobo 6
		070-079	Gobo 7
		080-089	Gobo 8
		090-099	Gobo 9
		100-153	Clockwise rotation fast to slow
		154-156	Stop
		157-210	Counter-clockwise rotation slow to fast
		211-215	Gobo 1 shaking slow to fast
		216-220	Gobo 2 shaking slow to fast
		221-225	Gobo 3 shaking slow to fast
		226-230	Gobo 4 shaking slow to fast
		231-235	Gobo 5 shaking slow to fast
		236-240	Gobo 6 shaking slow to fast
		241-245	Gobo 7 shaking slow to fast
246-250	Gobo 8 shaking slow to fast		
251-255	Gobo 9 shaking slow to fast		

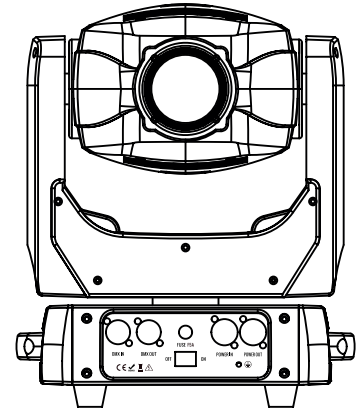

8	10	<b>Rotating Gobo</b>	
		000-009	Open
		010-019	Gobo 1
		020-029	Gobo 2
		030-039	Gobo 3
		040-049	Gobo 4
		050-059	Gobo 5
		060-069	Gobo 6
		070-079	Gobo 7
		080-089	Gobo_open shaking slow to fast
		090-099	Gobo 1 shaking slow to fast
		100-109	Gobo 2 shaking slow to fast
		110-119	Gobo 3 shaking slow to fast
		120-129	Gobo 4 shaking slow to fast
		130-139	Gobo 5 shaking slow to fast
		140-149	Gobo 6 shaking slow to fast
		150-159	Gobo 7 shaking slow to fast
		160-205	Clockwise rotation fast to slow
		206-209	Stop
210-255	Counter-clockwise rotation slow to fast		
9	11	<b>Gobo Rotation</b>	
		000 - 127	Gobo indexing
		128 - 189	Clockwise rotation fast to slow
		190-193	Stop
		194-255	Counter-clockwise rotation slow to fas
10	12	000-255	Focus near to far
11	13	000-127	Prism ON
		128-255	Prism OFF
12	14	000-005	Prism rotating stop
		006-255	Prism rotating slow to fast
13	15	000-255	Dimmer 0-100% (LED Ring)
14	16	000-255	LED Ring strobe from slow to fast
	17	000-255	LED Ring Red intensity 0-100%
	18	000-255	LED Ring Green intensity 0-100%
	19	000-255	LED Ring Blue intensity 0-100%
15	20	000-255	LED Ring Macro
16	21	000-255	LED Ring Macro speed from slow to fast
17	22	000-255	Built-in auto programs
18	23	000-159	No function
		160-189	5s to reset Pan/Tilt motors
		190-249	5s to reset Effect motors
		250-255	5s to reset the fixture