



UNMATCHED RELIABILITY AND SAFETY


# Instruction manual

# **19" POWER RACK SERIES**

EN



**CONTRIK**<sup>®</sup>

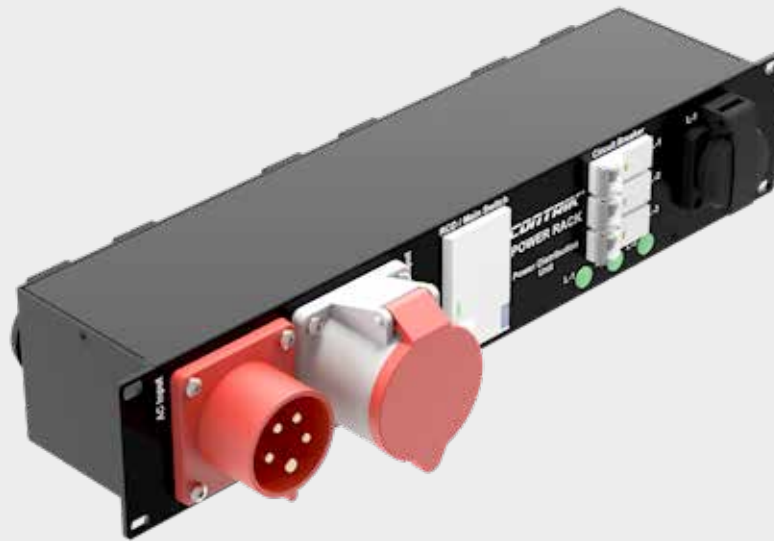

**CONTRIK  
19" Power Rack Series**

**1. General**

**Product group:  
CPR\_ | CPR16 & CPR32**

The information in this manual applies exclusively to the devices described in this manual and all variants of the **CONTRIK 19" Power Rack series**. Depending on the design of the devices and due to different components, there may be visual differences with the illustrations in the manual. In addition, the devices may differ from each other functionally or in their operation.

In addition to these operating instructions, other instructions (e.g. device components) may be included in the scope of delivery, which must be observed in full. In addition, improper use may cause hazards such as short-circuit, fire, electric shock, etc. Only pass the product on to third parties in its original packaging or with this operating manual.

For the safe use of the product, the national, legal regulations and provisions (e.g. accident prevention and occupational health and safety regulations as well as environmental regulations) of the respective country must also be observed. All company names and product designations contained herein are trademarks of their respective owners.




All rights reserved. For safety and approval reasons (CE), you may not modify and/or change the product. The product is not intended for use in the medical field. The product is not intended for use in explosive or flammable environments.

**Please pay attention to the national regulations: For Germany, it is a mobile equipment and therefore the instructions of the DGUV regulation 3 have to be followed.**

**2. Check delivery**

- **19" rack power distributor**
- **Electrical test report according to VDE 0701/0702**

### 3. Safety instructions

	<p><b>Read the operating instructions carefully and observe the safety instructions in particular.</b></p>
	<p><b>If you do not follow the safety instructions and the information on proper handling in this operating manual, we will not accept any liability for any resulting personal injury/property damage. In addition, the warranty/guarantee will be voided in such cases.</b></p>
	<p><b>This symbol means: Read the operating instructions</b></p>

The product is not a toy. Keep it away from children and pets.

- It voids the warranty if the device is modified manually.
  - Possible hazardous optical radiation emitting product.
  - Do not look into activated lamp. Possibly harmful to the eye.
  - Protect the product from extreme temperatures, direct sunlight, strong vibrations, high humidity, moisture, flammable gases, vapors and solvents.
  - Do not subject the product to very high mechanical stress.
  - If safe operation is no longer possible, take the product out of operation and protect it from unintended use.
  - Safe operation is no longer guaranteed if the product:
    - ▶ shows visible damage,
    - ▶ no longer functions properly,
    - ▶ has been stored for a long period of time under unfavorable
    - ▶ stored under unfavorable ambient conditions for a longer period of time, or
    - ▶ has been subjected to considerable transport stresses has been subjected to.
  - Handle the product with care. The product may be damaged by shocks, impacts or falling.
  - Also observe the safety instructions and operating instructions of the other devices that are connected to the product.
  - There are parts inside the product that are under high electrical voltage. Never remove covers. There are no user-serviceable parts inside the unit.
- Residual current circuit breakers (FI and FI/LS) must be checked for their function by pressing the test button before each use and at least once a month. If the residual current circuit breaker does not trip, it must be checked or replaced immediately.
  - Use a properly insulated 5-pole CEE cable to connect the device to the 400 V mains. Do not make any changes to the CEE cable and the CEE plug devices. Failure to do so may result in an electric shock and pose a risk of fire or death. If you are unsure, contact an authorized electrical technician.
  - Never plug in or unplug the power cord with wet hands.
  - Only use a proper 5-pin CEE mains socket (400 V/AC, 50 Hz) approved by a qualified electrician as the power source.
  - When supplying power to the device, make sure that the cable cross-section of the connecting cable is sufficiently dimensioned according for example to DIN or other national Norms.
  - Never connect the product to the power supply immediately after it has been moved from a cold room to a warm room (e.g. during transport). The resulting condensation water can possibly destroy the device or lead to an electric shock! Allow the product to come to room temperature first.
  - Wait until the condensation water has evaporated, this may take several hours. Only then may the product be connected to the power supply and put into operation.
  - Do not overload the product. Observe the connected load in the technical data.
  - Do not operate the product covered! At higher connected loads, the product heats up, which can lead to overheating and possibly fire when covered.
  - The product is only de-energized when the mains plug is pulled out.
  - Make sure that the product is de-energized before connecting any device to it.
  - The mains plug must be disconnected from the socket under the following conditions:
    - ▶ before cleaning the product
    - ▶ during thunderstorms
    - ▶ when the product will not be used for an extended period of time.
  - Never pour liquids on top of or next to the product. There is a high risk of fire or fatal electric shock. If liquid should nevertheless get inside the device, immediately switch off all poles of the CEE mains socket to which the product is connected (switch off fuse/automatic circuit breaker/FI circuit


breaker of the associated circuit). Unplug the product from the mains socket and contact a qualified electrician.

- Specialist: Do not operate the product any longer.
  - In commercial facilities, observe the local accident prevention regulations.
- For Germany:  
 German Federation of Institutions for Statutory Accident Insurance and Prevention (Verband der gewerblichen Berufsgenossenschaften) for electrical systems and equipment. In schools, training centers, hobby and do-it-yourself workshops, the handling of electrical equipment must be supervised by trained personnel.
- Contact a qualified person if you have any doubts about the mode of operation, safety or the connection of the product.
  - Have maintenance, adjustment and repair work carried out exclusively by a specialist or a specialist workshop.
  - If you have any questions that are not answered in these operating instructions, contact our technical customer service or other specialists.


## 4. Product description

### Unit design and variants

#### Front side

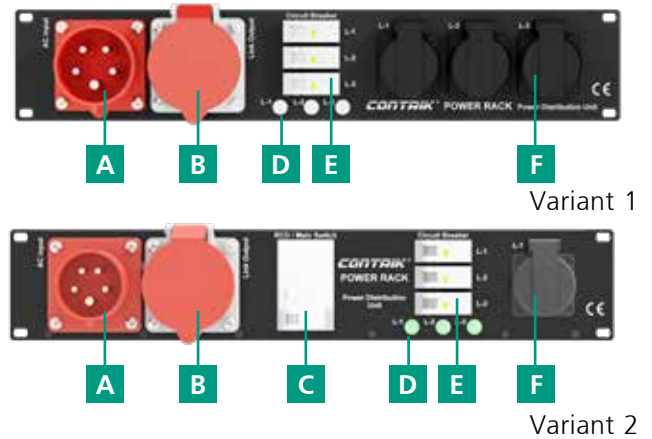

#### Back side

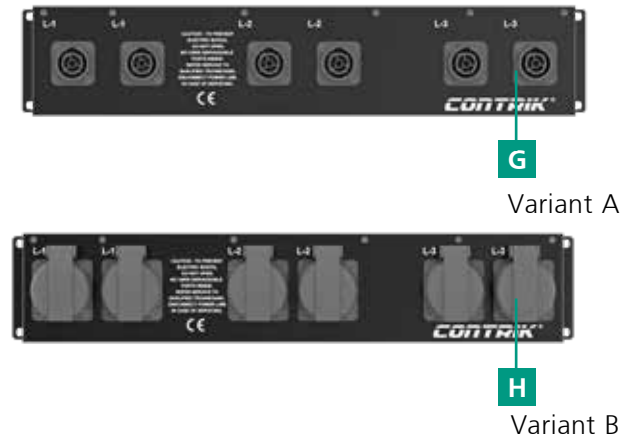

Pos.	Description
A	CEE 16 A or 32 A input
B	CEE 16 A or 32 A through-feed
C	Fuse protection RCD (For variants with 7 outlets (F+G))
D	Phase control
E	Fuse protection 3 x MCB
F	Schuko socket(s) Front Variant 1: 3 x (L1, L2, L3) Variant 2: 1 x (L1)
G	powerCON® TRUE1® TOP 2 x per phase
H	Schuko socket(s) rear side 2 x each per phase

## 5. Commissioning

The activities described in this chapter may only be performed by a qualified electrician!

**The device is exclusively intended for installation in a 19" cabinet or case.**

If the device is connected to a supply line with an insufficient line cross-section and/or insufficient back-up fuse, there is a risk of fire which can cause injuries or an overload which can cause damage to the device. Observe the information on the type plate!

Check the connection of the sockets

- ▶ Supply the power distributor with power via the connection.
- ▶ Switch on the protective devices.

## 6. Operation

This device is used to distribute electric current to several connected consumers.

The device is designed for professional use and is not suitable for household use. When permanently installed in stationary 19" rack cabinets, the device is suitable for unattended continuous operation.

Only use the device as described in these operating instructions. Any other use, as well as use under other operating conditions, is considered improper and may result in personal injury or property damage. No liability is accepted for damage resulting from improper use.

The device may only be used by persons who have sufficient physical, sensory and mental capabilities as well as appropriate knowledge and experience. Other persons may only use the device if they are supervised or instructed by a person responsible for their safety.

## 7. Maintenance, testing and cleaning

- The housing, mounting materials and suspensions must not show any signs of deformation. Cleaning of the interior of the unit may only be carried out by qualified personnel.
- Please check the local regulations for the product inspection details.  
For Germany:  
According to DGUV regulation 3, this inspection must be carried out by a qualified electrician or an electrically instructed person using suitable measuring and testing equipment. A period of 1 year has proven to be the testing interval. You must determine the interval in accordance with DGUV Regulation 3 Implementation Instructions to suit your actual operating conditions. The range is between 3 months and 2 years (office).
- Switch off the product before cleaning. Then disconnect the plug of the product from the mains socket. Then disconnect the connected consumer from the product.
- A dry, soft and clean cloth is sufficient for cleaning. Dust can be easily removed with the help of a long-haired, soft and clean brush and a vacuum cleaner.
- Do not under any circumstances use aggressive cleaning agents or chemical solutions, as this could attack the housing or impair the function.

## 8. Disposal




**Electronic devices are recyclable materials and do not belong in household waste.**

**Dispose of the product at the end of its service life in accordance with the applicable legal requirements.**

**By doing so, you fulfill the legal obligations and make your contribution to environmental protection.**

**Send the device to the manufacturer for disposal free of charge..**

### Label:

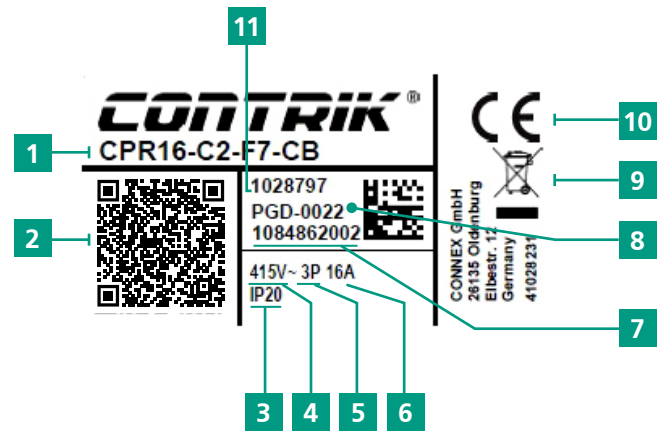

## 9. Technical data

### General specifications

Supply voltage	415 V/AC, 50 Hz
Rated current	16 A Power Rack 32 A Power Rack
Output connections	Schuko socket /powerCON® TRUE1® TOP 250 V 16 A CEE flange socket 415 V LINK 16 A (CPRS16...), 32 A (CPR32...) looped through and not fused
Protection class	IP20
Operating temperature	-5 to +40°C Due to operating temperatures > 20° C changes the the tripping behavior of the circuit breakers.
Relative humidity	50 %, non-condensing
Dimensions	483 mm x 88 mm (2 U) x 104 mm (without fittings)

Pos.	Description
1	Article name
2	QR code for further options such as: Manual
3	Protection class (IP)
4	Rated voltage
5	Number of outer conductors
6	Input connector
7	Serial number (& batch number)
8	Product group
9	Mandatory self-declaration (WEEE Directive)
10	CE marking
11	Part number

Further technical data can be found in the corresponding data sheets or at [www.contrik.com](http://www.contrik.com)

## Imprint

Subject to change due to technical progress! These operating instructions correspond to the state of the art at the time of product delivery and not to the current development status at Neutrik.

If any pages or sections of these operating instructions are missing, please contact the manufacturer at the address given below.

### Copyright ©

This user manual is protected by copyright. No part or all of this user manual may be reproduced, duplicated, microfilmed, translated or converted for storage and processing in computer equipment without the express written permission of Neutrik.

Copyright by: © Neutrik® AG


### Document Identification:

Documenten No.:	BDA 677 V1
Version:	2023/03
Original Language:	Deutsch

---

### Manufacturer:

**Connex GmbH / Neutrik Group**  
 Elbestraße 12  
 DE-26135 Oldenburg  
 Germany  
[www.contrik.com](http://www.contrik.com)

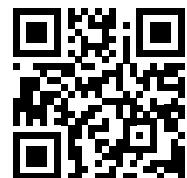





UNMATCHED RELIABILITY AND SAFETY

**LIECHTENSTEIN (HEADQUARTERS)**

**Neutrik AG**, Im alten Riet 143,  
9494 Schaan, Liechtenstein  
T +423 237 24 24, F +423 232 53 93, neutrik@neutrikgroup.com

**GERMANY / NETHERLANDS / DENMARK / AUSTRIA**

**Neutrik Vertriebs GmbH**, Felix-Wankel-Straße 1,  
85221 Dachau, Germany  
T +49 8131 28 08 90, neutrik@neutrikgroup.de

**GREAT BRITAIN**

**Neutrik (UK) Ltd.**, Westridge Business Park, Cothey Way Ryde,  
Isle of Wight PO33 1 QT  
T +44 1983 811 441, sales@neutrikgroup.co.uk

**FRANCE**

**Neutrik® France**, 52 Rue d'aguessseau,  
92100 Boulogne  
T +33 1 41 31 67 50, info@neutrikgroup.fr

**USA**

**Neutrik Americas**, 4115 Taggart Creek Road,  
Charlotte, North Carolina, 28208  
T +1 704 972 3050, info@neutrikusa.com

**JAPAN**

**Neutrik Limited**, Yusen-Higashinibashi-Ekimae Bldg., 3-7-19  
Higashinibashi, Chuo-ku, Tokyo 103  
T +81 3 3663 47 33, mail@neutrik.co.jp

**HONG KONG**

**Neutrik Hong Kong LTD.**, Suite 18,  
7th Floor Shatin Galleria Fotan, Shatin  
T +852 2687 6055, sales@neutrik.com.hk

**CHINA**

**Ningbo Neutrik Trading Co., Ltd.**, Shiqi Street, Yinxian Road West  
Fengjia Village, Hai Shu District, Ningbo, Zhejiang, 315153  
T +86 574 88250833, sales@neutrik.com.cn

**SWITZERLAND**

**Contrik AG**, Steinackerstrasse 35,  
8902 Urdorf, Switzerland  
T +41 44 736 50 10, contrik@contrik.ch

BDA 677 V1 - 19" Power Rack Series EN - 2023/02 - Data subject to change without prior notice. © 2023 Neutrik AG.

[www.contrik.com](http://www.contrik.com)